

NU350818, NU350830,
NU350854, NU350820





Wiser

Schneider
Electric

Light...W

(M)

1 x 500 W

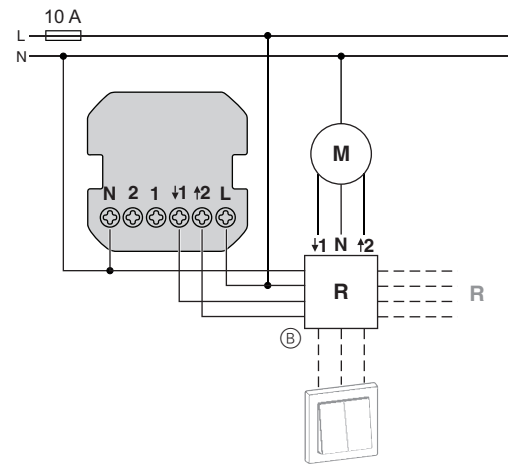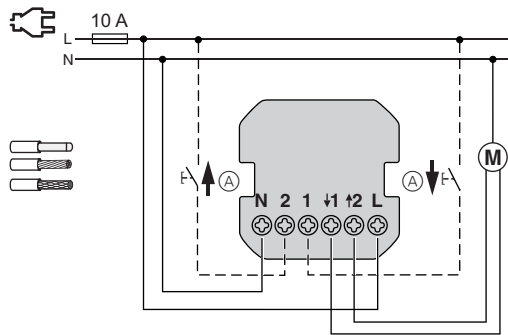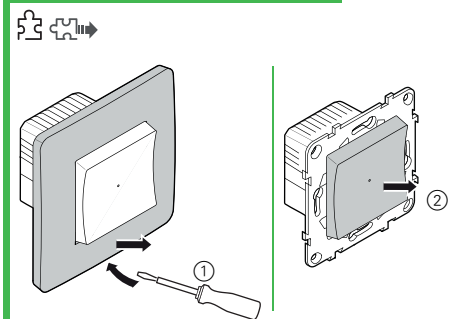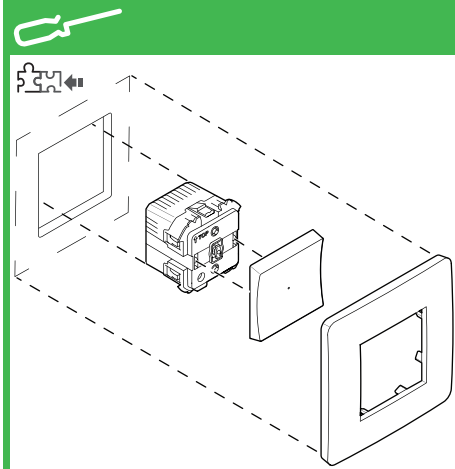

en

Wiser blind control switch

Necessary accessories

To be completed with:

- Frame in corresponding design

Accessories

To be completed with:


- Carrier plate of the desired design.

Prerequisites and accessories

- A Bluetooth-capable **smartphone/tablet** (referred to below as **smartphone**) with Bluetooth 4.1 or higher is required. Operating systems: Android™ 5.1 or higher, Apple® iOS 10.3 or higher.
- Download the **Wiser app** to your smartphone. You can use the app to couple, set up and control Wiser devices.
- Home control via the Internet: Supplement your Wiser system with the **Wiser Home Touch** control unit.

Product information is available

More detailed product information is available on the Internet -> Download document

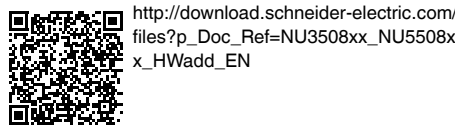

http://download.schneider-electric.com/files?p_Doc_Ref=NU3508xx_NU5508xx_HWadd_EN

For your safety

⚠ DANGER
HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

Safe electrical installation must be carried out only by skilled professionals. Skilled professionals must prove profound knowledge in the following areas:

- Connecting to installation networks
- Connecting several electrical devices
- Laying electric cables
- Safety standards, local wiring rules and regulations

Failure to follow these instructions will result in death or serious injury.

⚠ DANGER
Risk of fatal injury from electric shock.
The output may carry electrical current even when the load is switched off.

- When working on the device: Always disconnect the device from the supply by means of the fuse in the incoming circuit.

Failure to observe these instructions will lead to death or serious injuries.

Getting to know the Wiser blind control switch

You can use the Wiser blind control switch (referred to below as **blind control switch**) to control **one** blind or roller shutter motor that is equipped with an end position switch.

Control options

Room control: To actuate the blind control switch within a room, it can be coupled either with your smartphone or with another Wiser device. This coupling type is a default factory setting.

Home control: You can control the Wiser devices via the Internet using Wiser Home Touch.

On-site operation: The blind control switch can always be controlled directly on-site. You can also connect any number of mechanical double push-buttons.

Functions

Properties

- Protection of the motor against damage with two mutually electrically locked relay contacts
- Operation with extension unit (mechanical double push-button)
- Group control of multiple blinds
- Central control of multiple blind groups

Settings:

- Resetting to default settings/Bluetooth

Additional app functions (default setting: no settings made):

- Time switch (weekday switching, astro and random function)
- Status LED display (e.g. orientation light, show blind movement)
- Setting the blind movement time
- Varying blind and slat position
- Coupling to other devices

⚠ CAUTION

The device can become damaged!

- Always operate the product in compliance with the specified technical data.
- Observe the instructions of the motor manufacturer.
- Only connect a blind motor or roller shutter motor with an end limit switch.

i

"Blind/roller shutter" will be referred to below as just "blind".

Mounting the blind control switch



Ⓐ Mechanical double push-button at extension unit connection (optional)

Ⓑ Multi-control relay (R) for group or central control

Removing the cover



① Remove the frame.

② Pull the push-button off.

nl

Wiser jaloezieschakelaar

Завантаження на www.schneider-electric.com.ua

Benodigde accessoires

Aan te vullen met:

- Frame van overeenkomstig ontwerp

Accessoires

Aan te vullen met:


- Dragerplaat van gewenst ontwerp.

Voorwaarden vooraf en accessoires

- Een **smartphone/tablet** (hieronder **smartphone** genoemd) met Bluetooth 4.1 of hoger is vereist. Besturingssystemen: Android™ 5.1 of hoger, Apple® iOS 10.3 of hoger.
- Download de **Wiser-app** op uw smartphone. U kunt met de app Wiser-apparaten koppelen, instellen en besturen.
- Thuisbesturing via het internet: Vul uw Wiser-systeem aan met de **Wiser Home Touch**-besturing.

Productinformatie is beschikbaar

Meer gedetailleerde productinformatie vindt u op het internet -> Document downloaden

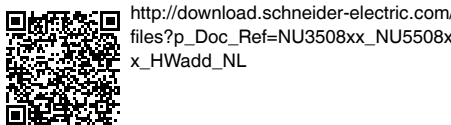

http://download.schneider-electric.com/files?p_Doc_Ref=NU3508xx_NU5508xx_HWadd_NL

Voor uw veiligheid

⚠ GEVAAR
RISICO OP ELEKTRISCHE SCHOK, EXPLO-SIE, OF OVERSLAG

Een veilige elektrische installatie mag alleen worden uitgevoerd door ervaren deskundigen. Ervaren deskundigen moeten een grondige kennis hebben van het volgende:

- Aansluiting op elektriciteitsnetwerken
- Aansluiten van meerdere elektrische apparaten
- Leggen van elektrische leidingen
- Veiligheidsnormen, lokale bedradingsvoorschriften

Als deze instructies niet worden opgevolgd, heeft dit de dood of ernstige verwondingen tot gevolg.

⚠ GEVAAR
Levensgevaar door elektrische schok!

Zelfs als het apparaat is uitgeschakeld, kan er op de uitgangen elektrische stroom staan.

- Bij werkzaamheden aan het apparaat: Koppel het apparaat altijd los van de voeding met behulp van de zekering in de binnenkomende stroomkring.

Als deze instructies niet worden opgevolgd, zal dit leiden tot ernstig of zelfs dodelijk letsel.

Kennismaking met de Wiser jaloezieschakelaar

U kunt met de Wiser jaloezieschakelaar (hierna **jaloezieschakelaar**) één jaloezie- of rolluikmotor, voorzien van een eindpositieschakelaar, besturen.

Besturingsopties

Kamerbesturing: Om de jaloezieschakelaar in een kamer te activeren, kan deze worden gekoppeld. Dat kan zowel met uw smartphone als met een ander Wiser-apparaat. Het koppelingstype is een standaard fabrieksinstelling.

Thuisbesturing: Met behulp van Wiser Home Touch kunt u de Wiser-apparaten bedienen via het internet.

Gebruik op locatie: De jaloezieschakelaar kan altijd rechtstreeks op locatie worden bestuurd. Er kunnen tevens een onbeperkt aantal mechanische dubbele impulsdrukkeren op worden aangesloten.

Functies

Eigenschappen

- Bescherming van de motor tegen schade met twee wederzijds elektrisch geblokeerde relaiscontacten
- Bediening met verlenging (mechanische dubbele impulsdrukker)
- Groepsbesturing van meerdere jaloezieën
- Centrale besturing van meerdere groepen jaloezieën

Instellingen:

- Standaardinstellingen/Bluetooth herstellen

Extra app-functies (standaardinstelling: geen instellingen gemaakt):

- Tijdschakelaar (schakelen op weekdays, astro- en randomfunctie)
- Weergave statusled (bijv. oriëntatielicht, beweging van jaloezieën laten zien)
- Bewegingstijd jaloezieën instellen
- Variabele positie van jaloezieën en lamellen
- Koppeling aan andere apparaten

⚠ LET OP

Het apparaat kan beschadigd raken!

- Gebruik het product altijd in overeenstemming met de gespecificeerde technische gegevens.
- Volg de instructies van de fabrikant van de motor op.
- Sluit een jaloeziemotor of rolluikmotor alleen aan met een eindbegrenzingsschakelaar.

i

Hieronder wordt "jaloezie" gebruikt voor zowel "rolluik" als "jaloezie".

De jaloezieschakelaar monteren



Ⓐ Mechanische dubbele impulsdrukker bij aansluiting verlenging (optioneel)

Ⓑ Multi-besturingsrelais (R) voor groeps- of centrale besturing

De afdekking verwijderen



① Verwijder het frame.

② Verwijder de impulsdrukker door deze eraf te trekken.

